

asfi.pl

POWER CONTROL



Instruction manual

PowerControl series 55-500



www.heatrecovery.pro

Table of contents

1. Purpose of the manual.....	5
2. Safety	5
3. Transport and storage	7
3.1. Receipt.....	7
3.2. Unpacking and handling	8
3.3. Long-term storage	8
4. Before installing the heat recovery system	9
4.1. On-site location	9
4.2. Maximum values for water in the heat recovery system.....	9
5. Intended use/technical data/structure	10
5.1. PowerControl series	11
5.1.1. PowerControl models 55 and 110	12
5.1.2. PowerControl models 160, 250, 350 and 500	14
5.2. Process flow diagrams	16
6. Initial start-up of recovery / installation.....	19
7. Errors and failures.....	21
8. Maintenance	22
8.1. Maintenance notifications	22
9. Controller	24
9.1. Home screen.....	24
9.2. Settings.....	25
9.3. Alerts	26
9.4. Data	27
9.5. Service.....	28
9.5.1. Modbus communication.....	29
10. Electrical diagram	30

11.	Final remarks	32
12.	Warranty.....	33
13.	List of figures and tables.....	34

1. Purpose of the manual

This manual is addressed to all ASFI customers who have purchased the PowerControl external heat recovery system. The manual will help you to use the unit without any specific theoretical background, familiarise you with the application possibilities and allow you to understand its operation.

Reading this manual can help eliminate risks, save maintenance and downtime expenses, and extend the reliability and life of your system. It provides help in case of problems, key information on necessary maintenance and details of accessories for the unit.

Operational staff on site should have the manual available at all times.

Once you have read the manual, the PowerControl is ready to go. The manual provides a useful supplement to the domestic standards for environmental protection and accident prevention. The heat recovery system is partly shown in the drawings without any protective covers or devices to provide a better overview of the unit. However, operation without them is prohibited.

The compressor manual contains all safety-related information for each specific compressor to which the PowerControl system may be connected.

2. Safety

Proper use, inspection and maintenance increase the life and utility of the PowerControl. Anyone involved in the maintenance of the unit must be physically able to perform the necessary tasks and be familiar with the procedures for servicing the units. No person may proceed with the installation and maintenance of the heat recovery system until they are familiar with this manual. Persons familiar with the manual must be able to use both normal mechanical hand tools and specialised instruments in a proper and safe manner.

The heat recovery system may only be used as per this manual and in compliance with its intended application. The user is responsible for ensuring that only authorised and duly trained persons operate the heat recovery system and that operating, maintenance and

service personnel are familiar with and strictly adhere to all safety measures. The user must ensure that only duly qualified and authorised persons operate the heat recovery system, and that no person with a slow response time operates the heat recovery system.

When operating the heat recovery system, any working technique that compromises the safety of the system is not permitted. Use the recommended personal protective equipment to shield yourself from sharp edges and corners when operating the heat recovery system. The work area must be kept clean and organised to prevent hazards from dirt and misplaced parts. It is not permitted to operate the heat recovery system without the necessary protective equipment. It is not permitted to dismantle safety and protective equipment.

All safety covers must be closed before starting the system; they must not be opened while the system is in operation. The compressor to which the heat recovery system is or will be connected must be shut down before the covers are removed or secured for repair or maintenance. Refer to the relevant sections of the compressor manual and this manual for this purpose. Once the connection or maintenance work has been completed, the housing and protections must be reinstalled.

Any alterations or modifications to the heat recovery system may only be carried out with the approval of ASFI and in compliance with all applicable safety regulations. Unauthorised alterations waive the manufacturer's liability for any damage caused.

Do not start the heat recovery system if one or more components are damaged, if the system cannot be started, or if the damage is visible or foreseeable.

Before carrying out any work on the heat recovery system, ensure that the electrical supply has been disconnected, locked, and marked, and that the hydraulic system of the PowerControl has been completely drained of oil and water. Make sure the unit has been disconnected from the electrical supply for at least 15 minutes before carrying out any repairs.

Certain maintenance tasks are technically complex and require specific tools, equipment, training, and knowledge to perform them correctly. Under such circumstances, only ASFI certified technicians may be allowed to maintain the PowerControl. Maintenance personnel

may not undertake any maintenance or inspection tasks outside the scope of the instructions in this manual. For further details, please contact ASFI or your device supplier.

ASFI cannot provide all possible repair methods or be aware of all potential risks and/or accidents. Make sure that safety is not compromised by the operations performed if maintenance procedures are carried out that are not explicitly suggested by the manufacturer. Secure the PowerControl in a safe place before seeking technical assistance if you are unsure of the maintenance process. Both this manual and other materials supplied with the unit, when used as intended, contain information for qualified technical personnel only. The use of non-original spare parts may invalidate any warranties and create safety risks and performance problems. For further details, please contact ASFI or your device supplier.

3. Transport and storage

3.1. Receipt

Review the delivery note for any damage or missing items before signing the receipt. Make a note of any damage or missing items before signing the receipt. To inspect the goods, speak to the carrier straight away about your desire to check the delivery. Leave all materials in place until the carrier has checked the consignment.

Receipts that have been signed but do not contain any comments are deemed to have been delivered *without reservation*. Subsequent complaints shall constitute claims for latent defects. For claims due to damage to the consignment, please contact the transport company directly.

If damage (latent defect) is found upon receipt of the consignment, please make a phone call to the transport company. The phone call to the carrier should be made within 15 days of receipt of the consignment, followed by an inspection and written confirmation. In the event of a claim for a latent defect, the onus is on the recipient to prove that the damage occurred during transport.

Check on the rating plate that the model supplied is as ordered and that it is suitable for the customer's electrical installation.

All electrical components and the unit housing must comply with the requirements of the installation environment.

3.2. Unpacking and handling

The PowerControl is supplied in polyethylene or other material packaging. Should it be necessary to cut through the packaging with a knife, use caution so as not to damage the top layer of the unit's thermal insulation or any other protruding component. Neither ASFI nor any other supplier is responsible for damage to the unit during improper unpacking and handling.

3.3. Long-term storage

Unless the product is used immediately after delivery, it should be prepared for long-term storage and protected as follows:

- place on a flat, stationary surface,
- protect all edges and walls of the housing from damage,
- do not store directly on the ground (e.g. earth or concrete),
- do not store in direct contact with chemicals,
- protect the control panel and the four pipes protruding from the housing from damage and live creatures entering the hydraulic system,
- protect the unit from dust and moisture.

In the event of improper storage, the company supplying the device is not responsible for any damage caused. Please contact the service department of the distributing company for detailed information on long-term storage.

4. Before installing the heat recovery system

4.1. On-site location

Use any location with a level, stable surface to install the heat recovery system. The floor on which the PowerControl will be placed must not be made of flammable materials. It is recommended to place the PowerControl system in a clean, dry, dust-free and well-ventilated area.

To ensure proper operation and maintenance, a clearance of approximately 0.5 metre must be maintained around the PowerControl. The room must not contain any flammable objects or liquids. High ambient humidity and temperatures exceeding 35°C (non-condensing) must be avoided. Due to the water content of the unit, the lowest ambient temperature that can occur in the room is 5°C.

4.2. Maximum values for water in the heat recovery system

Table 1. Maximum value for water in the heat recovery system.

No.	Material	Element/chemical compound	Limit value	Unit
1	Total calcium (Ca + Mg)	Ca + Mg	< 0.01	mmol/litre
			< 0.0562	°dH
2	Manganese	Mn	< 0.1	mg/l
3	Iron	Fe	< 0.2	mg/l
4	Free chlorine	Cl	< 0.5	mg/l
5	Ammonia	NH ₃	< 2	mg/l
6	Oxygen	O ₂	< 2	mg/l
7	Non-carbonate hardness	-	< 6	°dH
8	Silicon oxide	SiO ₂	< 8	mg/l
9	Carbonate hardness	CaCO ₃	< 16	°dH
10	Free aggressive carbon dioxide	CO ₂	< 20	mg/l
11	Total hardness	-	< 22	°dH
12	Sulphates	SO ₄	< 60	mg/l
13	Nitrate	NO ₃	< 100	mg/l
14	Chlorides <70°C	Cl	< 100	mg/l
15	Chlorides <50°C	Cl	< 200	mg/l
16	Total dissolved substances	TDS	< 600	mg/l
17	Electrical conductivity	-	< 1500	µS/cm
18	pH of water	-	7-9	

Table 1 shows the maximum values that may occur in the water circuit inside the heat recovery system. These are suggested parameters that may change depending on the operating environment. The operating temperature and overall composition are the determining elements in each situation. No warranty claims will be considered on this basis.

Adherence to the above water properties will allow the heat recovery unit to operate for a long time without failure.

5. Intended use/technical data/structure

The heat recovery system shall be considered as an accessory for oil-injected compressors equipped with a heat exchanger. A closed oil circuit is factory-built into the compressors to ensure sufficient lubrication and cooling of the screw stage. When the screw stage cools down, the oil absorbs the high temperatures by heating up. By connecting the PowerControl system to the heat exchanger through which the oil flows, heat can be recovered in the form of hot water. The flow in the circuit is forced by a variable speed circulating pump, controlled by an analogue signal, to maintain a constant water temperature measured upstream and downstream of the heat exchanger. Heat recovery from the oil does not take place immediately. It must first be ensured that the compressor cooling oil has reached a sufficient temperature. When the oil has not reached the required temperature, the water circulation pump does not pump water, as this would cause the oil to cool down. When the oil has reached a sufficient temperature, the water circulation pump starts and begins to pump water to the heat exchanger.

The way the heat recovery system works protects the system from overheating (expected in summer) by regulating the flow of water through the circulation pump to the heat exchanger. With no heat recovery on the oil side, the oil is cooled in the oil cooler.

Water and oil temperatures are monitored using three temperature sensors. The two sensors measuring the water temperature are located upstream and downstream of the heat exchanger. By reading the two temperature values of the water entering and leaving the recovery circuit, the automation system automatically adjusts the flow rate to the oil temperature so that the oil does not overcool.

On the oil side, there is one temperature sensor to be installed on the oil return pipe after the heat exchanger. The temperature values can be displayed on the control panel in the PowerControl.

The PowerControl heat recovery system is available in six series. These differ in the internal fittings used and are tailored to the compressor power from which the heat will be extracted. However, the principle of operation of each is the same.

5.1. PowerControl series

The PowerControl heat recovery system distinguishes between 6 different series.

Table 2. Series with operating point specifications.

PowerControl series						
Model	Maximum compressor power, kW For $\Delta 15/\Delta 20$	Volume of heat recovered, kW	Pump module dimensions (L x W x H), mm	Controller dimensions (L x W x H), mm	Disposable pressure - water side, kPa	Electrical power, W
PowerControl 55	55	38.50	420 x 250 x 230	300 x 300 x 200	60	<300
PowerControl 110	110	77.00	420 x 250 x 230	300 x 300 x 200	50	<300
PowerControl 160	132 / 200	92.40 / 140.00	2x 920 x 245 x 280	300 x 300 x 200	40	<300
PowerControl 250	200 / 300	140.00 / 210.00	2x 920 x 245 x 280	300 x 300 x 200	40	<600
PowerControl 350	250 / 350	175.00 / 245.00	2x 920 x 245 x 280	300 x 300 x 200	40	<600
PowerControl 500	350 / 500	245.00 / 350.00	2x 920 x 245 x 280	300 x 300 x 200	40	<900

The series types of PowerControl heat recovery systems are described in the table above. The series differ in the sizes/widths of the hydraulic fittings used.

Table 3. Pump groups DN32-DN65.

Model	Connection to heating circuits	Pump	Max. operating temperature	Max. operating pressure
PowerControl 55	DN25 (1")	WILO Para MAXO	110°C	PN6
PowerControl 110	DN25 (1")	WILO Para MAXO	110°C	PN6
PowerControl 160	DN32 (48.3 mm)	MAGNA3 32-120F	90°C	PN10
PowerControl 250	DN40 (48.3 mm)	MAGNA3 40-120F	90°C	PN10
PowerControl 350	DN50 (60.3 mm)	MAGNA3 50-120F	90°C	PN10
PowerControl 500	DN65 (76.1 mm)	MAGNA3 65-120F	90°C	PN10

5.1.1.1. PowerControl models 55 and 110

The PowerControl models 55 and 110 with WILO-Para MAXO pumps are designed for compressors up to 110 kW. They consist of a circulating pump, 3 shut-off valves, 2 temperature sensor holders mounted in two shut-off valves, EPP insulation, piping and connecting components.

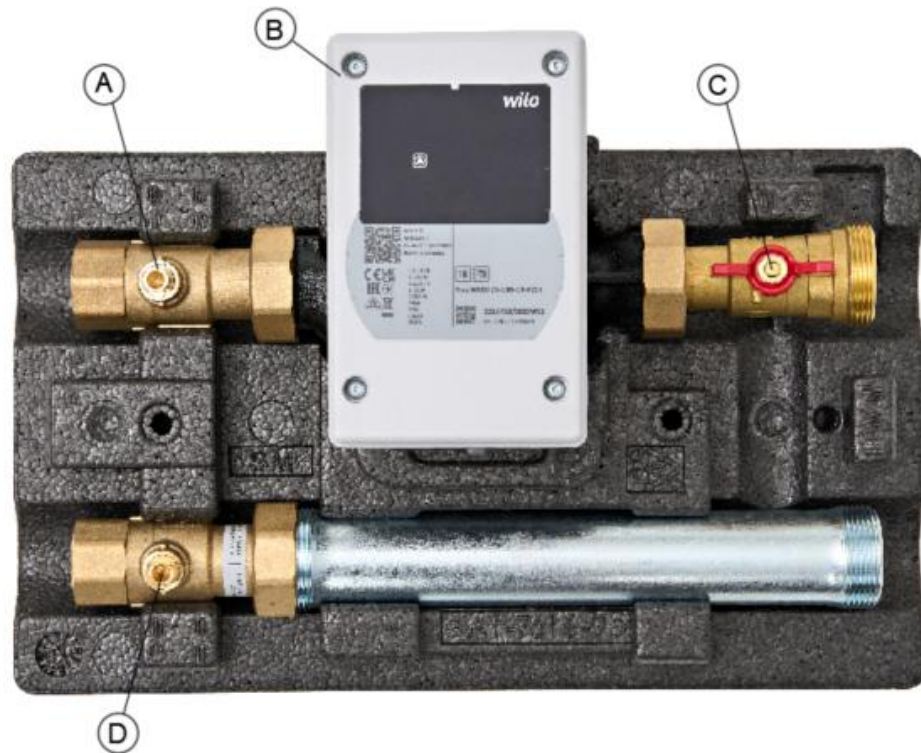


Figure 1. Hydraulic fittings for PowerControl 55 and 110.

Key:

- A) Shut-off valve with temperature sensor holder,
- B) WILO-Para MAXO 25 pump,
- C) Two-way shut-off valve,
- D) Shut-off valve with temperature sensor holder.

Table 4. Technical data for PowerControl 55 and 110.

Diameter	DN25 (1")
Temperature of use	Max. 110°C
Maximum operating pressure	PN6
Kvs value	7.8 m ³ /h
Weight (excluding pump)	Approx. 5.7 kg
Upper connections	G1" female thread
Lower connections	G1 ½" male thread, flat seal
Pump installation length/connection	180 mm / 2x G1 ½" male thread, flat seal
Wheelbase between supply (VL) / return (RL)	125 mm
Shut-off valve with integrated check valve	Opening pressure of 200 mm H ₂ O at ball valve on return (RL)
Materials of construction	Steel, brass, EPP thermal insulation
Sealing materials	PTFE, asbestos-free fibre gasket, EPDM
PG EPP thermal insulation	Fire protection class B2 - normal flammability (according to DIN 4102 and EN 13501-1)

5.1.2. PowerControl models 160, 250, 350 and 500

The PowerControl models 160, 250, 350 and 500 with Grundfos MAGNA3 pumps are designed for compressors from 110 kW. These models consist of a circulating pump, 3 shut-off valves (one with integrated check valve), 2 temperature sensor holders, mesh filter, EPP insulation, pipes and connecting components.

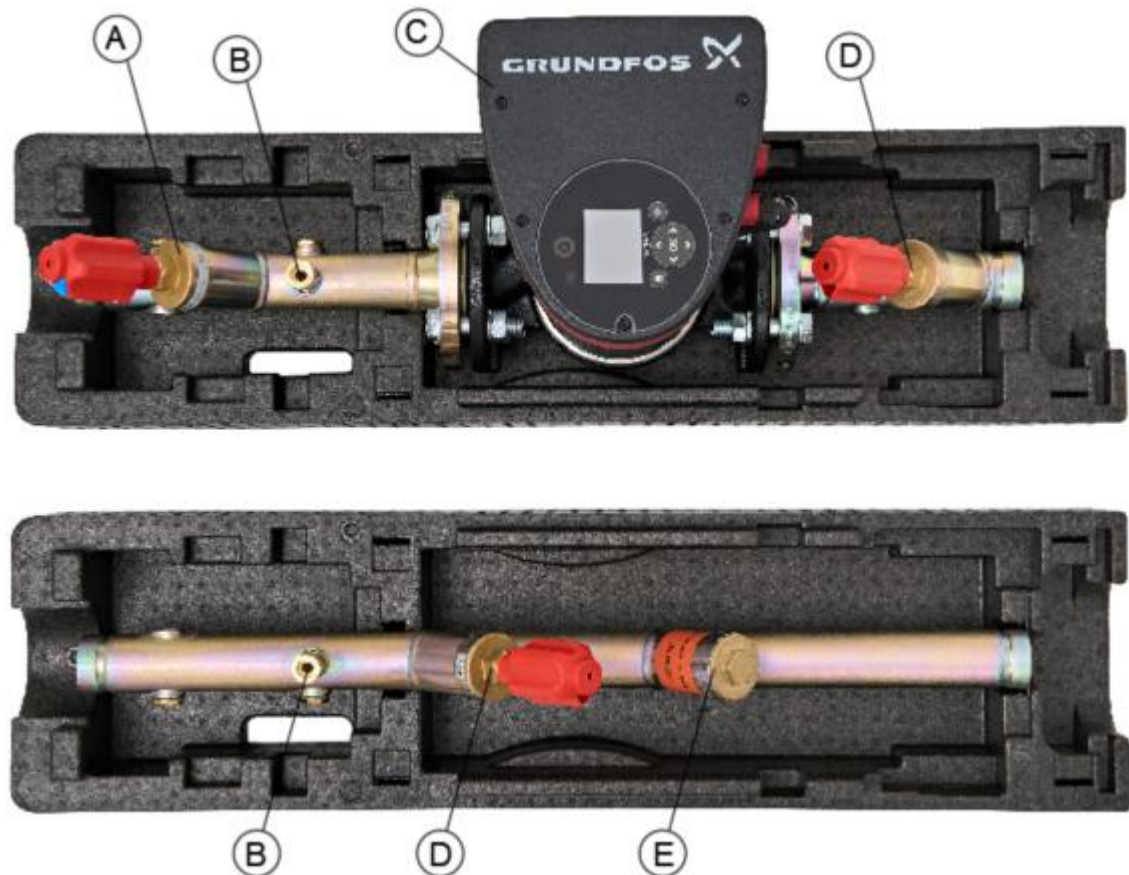


Figure 2. Hydraulic fittings for PowerControl 160, 250, 350 and 500.

Key:

- A) Slanted shut-off valve with integrated check valve,
- B) Temperature sensor holder,
- C) MAGNA3 pump model 32-120F, 40-120F, 50-120F or 65-120F depending on the PowerControl model selected,
- D) Shut-off valve,
- E) Water mesh filter.

NOTE

In order for the built-in check valve incorporated in the slanted shut-off valve with integrated check valve (fig. 2, marking A) to function correctly, it is necessary to open the valve in a position that allows maximum fluid flow. If the valve is in any other position, the integrated check valve will not function.

Table 5. Technical data for PowerControl models 160, 250, 350 and 500.

Name	DN32 (1 ¼")	DN40 (1 ½")	DN50 (2")	DN65 (2 ½")
Temperature of use	max. 90°C	max. 90°C	max. 90°C	max. 90°C
Maximum operating pressure	PN10	PN10	PN10	PN10
Kvs value	7.80 m ³ /h	9.75 m ³ /h	18.7 m ³ /h	31.7 m ³ /h
Upper connections	DN32 / 42.4 mm, ending with a groove for a Victaulic clamp	DN40 / 48.3 mm, ending with a groove for a Victaulic clamp	DN50 / 60.3 mm, ending with a groove for a Victaulic clamp	DN65 / 76.1 mm, ending with a groove for a Victaulic clamp
Lower connections	DN32 / 42.4 mm, ending with a groove for a Victaulic clamp	DN40 / 48.3mm, ending with a groove for a Victaulic clamp	DN50 / 60.3 mm, ending with a groove for a Victaulic clamp	DN65 / 76.1 mm, ending with a groove for a Victaulic clamp
Pump installation length/connection	180mm / 2x 2" male thread	250mm / 2x DN40 flange, flat seal	280mm / 2x DN50 flange, flat seal	340mm / 2x DN65 flange, flat seal
Wheelbase between supply (VL) / return (RL)	250 mm	250 mm	250 mm	250 mm
Check valve	1x (supply)	1x (supply)	1x (supply)	1x (supply)
Materials of construction	Steel, brass, EPP thermal insulation	Steel, brass, EPP thermal insulation	Steel, brass, EPP thermal insulation	Steel, brass, EPP thermal insulation
Sealing materials	PTFE, asbestos-free fibre gasket, EPDM	PTFE, asbestos-free fibre gasket, EPDM	PTFE, asbestos-free fibre gasket, EPDM	PTFE, asbestos-free fibre gasket, EPDM
PG EPP thermal insulation	Fire protection class B2 - normal flammability (according to DIN 4102 and EN 13501-1)	Fire protection class B2 - normal flammability (according to DIN 4102 and EN 13501-1)	Fire protection class B2 - normal flammability (according to DIN 4102 and EN 13501-1)	Fire protection class B2 - normal flammability (according to DIN 4102 and EN 13501-1)

5.2. Process flow diagrams

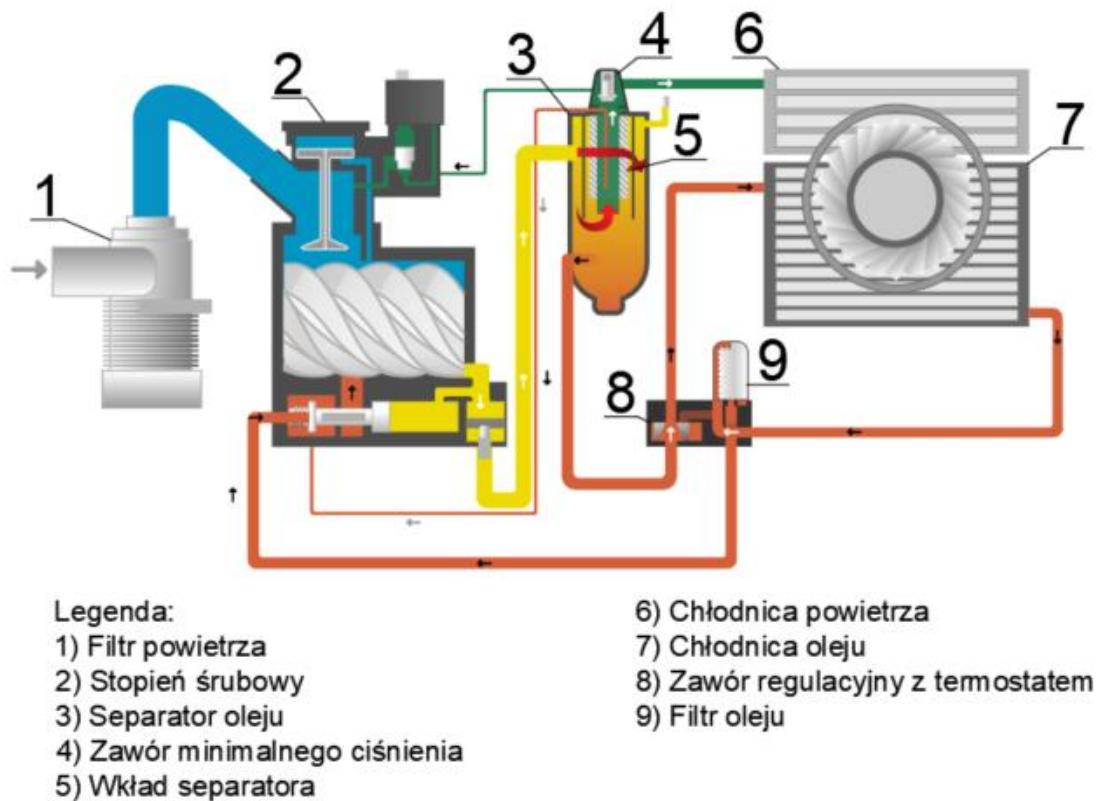


Figure 3. Compressor process diagram.

Figure 3 shows the process diagram of the compressor. Ambient air is drawn in through the filter (1), then directed through the suction valve. Oil, previously cleaned in the filter (9), is injected into the compressed air in the screw stage (2). The oil injection ensures adequate lubrication, sealing and cooling of the screw stage (2). The oil/air mixture is compressed in the spaces between the screw rotors and then directed into the oil separator tank (3), where most of the contained oil is precipitated. From the oil separator, the air flows through the separator cartridge (5) and the minimum pressure valve (4) to the air cooler (6). The oil accumulating in the oil separator (3) flows through a thermostatic control valve (8). When the oil temperature is high, it is cooled in the oil cooler (7) and further pumped to the screw stage. During the start-up phase, the thermostatic valve (8) bypasses the cooler by feeding the oil in a short circuit to the injection bypassing the cooler.

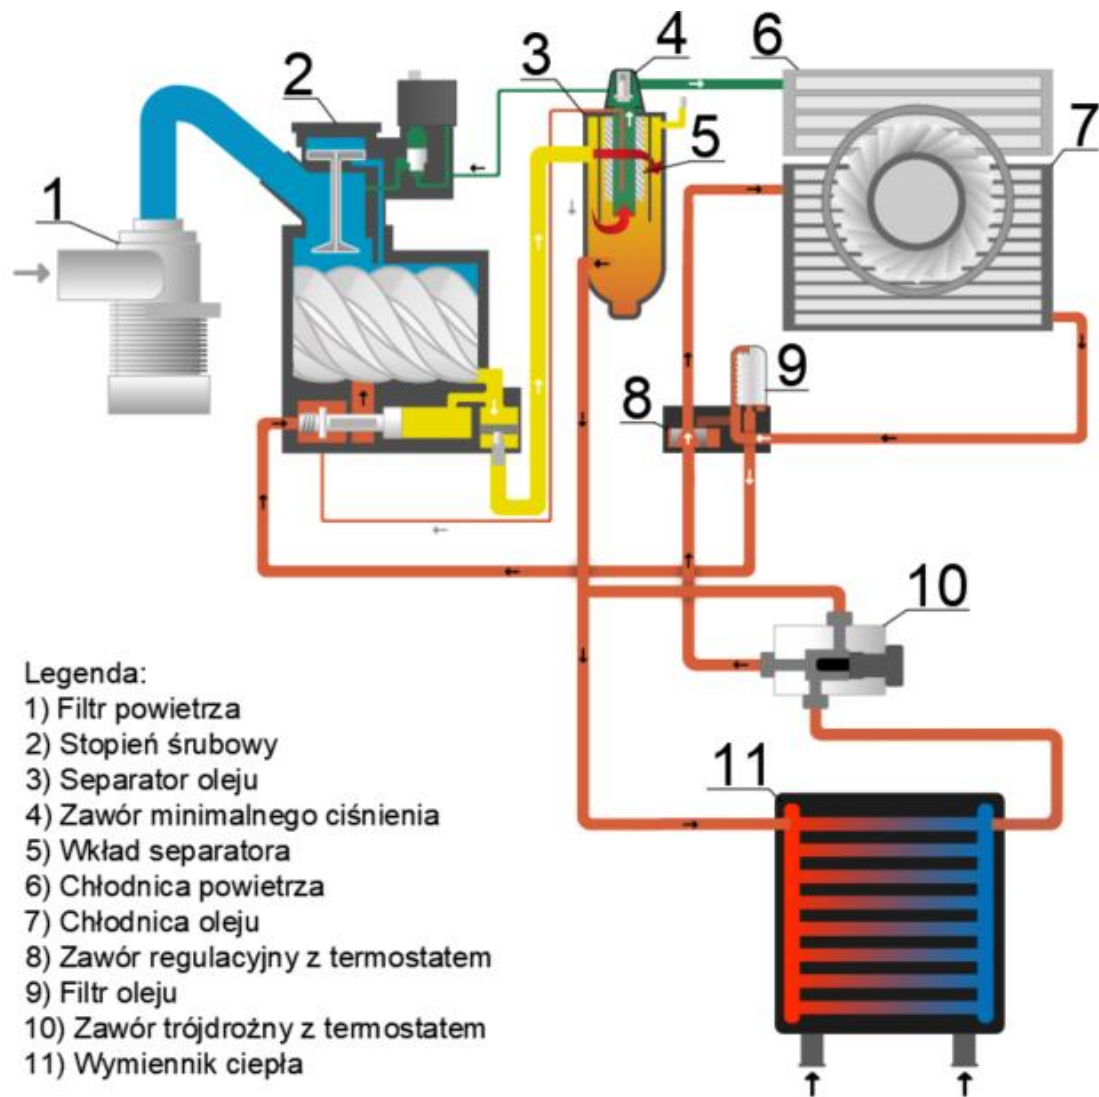


Figure 4. Process diagram of a compressor equipped with a heat exchanger.

Figure 4 shows a process diagram of a compressor equipped with a heat exchanger. The principle of operation of the compressor is the same as in Figure X. The difference is that the compressor is equipped with a heat exchanger and a three-way valve with thermostat. Oil from the separator flows into the heat exchanger, to which an oil heat removal system can be connected. The function of the thermostatic three-way valve (10) is to protect the compressor against oil overcooling. It is equipped with an insert with a 55°C setting and ensures that the oil flowing out of the valve (10) is not colder than 55°C. If the oil were colder, e.g. 20°C, and the air intake in winter was, e.g. -10°C, this would cause condensation on the screw stage and not in the air cooler.

6. Initial start-up of recovery / installation

Installation of the heat recovery system should not be carried out until the conditions described in Section 4 - *Before installing the heat recovery system* - have been read and met.

Prior to initial start-up of the heat recovery system, ensure that all supplied components are complete and that no transport damage is visible on the outer housing. The scope of delivery depends on the product ordered. The scope of the supplied components includes:

- pump group + controller
- instruction manual

The installation for connecting the PowerControl system to the compressor must be carried out by authorised service technicians.

Before proceeding with hydraulic operations, remove all protective materials from the PowerControl. The compressor should also be switched off with the mains disconnect and protected against accidental reconnection and all systems inside depressurised. In addition, the tightness of the system, the correctness of the hydraulic connections and the accuracy and correctness of the electrical connections should be checked. In addition, the setting values should be noted, and technical documentation kept with the unit.

Once the above steps have been completed, installation can begin.

Pipes installed between the PowerControl unit and the compressor should be certified for the conditions generated by heat recovery. Pipes should be installed in such a way that they do not transmit any stresses or vibrations. The use of vibration stabilisers is recommended.

The 55 and 110 versions of the recovery systems do not come with a mesh filter and check valve fitted. Their use is necessary because the filter acts as a water filtration and its main function is to protect the pipelines, pump, exchanger and plant on the receiving side from impurities, while the check valve guarantees the flow of the medium in one direction only, while blocking the flow of the same medium in the opposite direction.

After the connection of the heat recovery system to the compressor, a leak test is mandatory. This will prevent leakages and spills. If a heat recovery leak occurs, it must be found. If the leak occurs in a moving part, e.g. a screw, it must be tightened until it is leak-free. If a leak occurs elsewhere, immediately shut down the heat recovery and contact the service department.

Once the heat recovery system has been connected and tested successfully, the PowerControl system can be started.

7. Errors and failures

This chapter provides basic troubleshooting information. Thorough inspections by trained personnel in the safety, use and maintenance of this equipment is the most effective way to accurately identify the source of problems.

Table 6. General failures.

Symptom	Failure	Solution
Unable to start	No power	Check the power switch - setting the switch to the 'I' position indicates the correct setting. If the problem persists, contact a qualified electrician.
	Controller failure	Check power supply to the unit. Repair/replace the unit.
No reading or temperature rise on the water and oil side	Temperature sensor failure	Check that the temperature sensor is connected properly. If so, it will need to be repaired/replaced by the service department.
	Heat exchanger failure	Replace with new heat exchanger by the service department.
	Circulation pump failure	Check the power supply to the circulation pump. If the problem persists, repair/replacement by the service department will be required.
Similar flow and return temperature readings	Circulation pump failure	Check the speed at which the circulation pump is pumping water to the heat exchanger. If the value deviates from the setpoint, the circulation pump will require adjustment or repair/replacement by the service department.
	Low oil flow	Contact the service department to check the patency of the oil system.
	Blocked three-way oil valve at exchanger in compressor	

The table above summarises information on typical symptoms, probable causes and repair methods. Do not attempt to repair the unit yourself; contact a qualified service technician to do so. Any tampering with a malfunctioning component by an untrained person may lead to a safety hazard for that person or permanent damage to the unit.

8. Maintenance

Maintenance work on the PowerControl may only be carried out by trained service personnel. Non-trained personnel may not interfere in any way with the PowerControl system.

Before carrying out maintenance work, ensure that the compressor has been shut down using the mains disconnect switch, protect against accidental reconnection, and depressurise all systems inside. As there is hot oil and water in the pipes of the heat recovery system, wait a few hours after stopping the compressor before disconnecting the connections.

Regular cleaning and maintenance are essential for a long and properly functioning heat recovery system. Failure to carry out maintenance can lead to failure, e.g. of the circulation pump.

8.1. Maintenance notifications

Depending on the service level selected, the unit will notify the user to the need for component maintenance by periodically displaying a service message together with a flashing LED.

- Maintenance chart.

As suggested below, maintenance should be carried out as follows:

1. When specified by the controller,
2. After a specified number of hours or according to the unit's maintenance schedule.

Table 7. Maintenance chart.

Frequency	Action	Component undergoing maintenance
Every day	Check	Tightness of fittings and hose connections
	Check	Controller - service indicators
	Check	Mesh filter - is it clogged?
	Check	Oil and water pressure in the system
Every month	Calibrate temperature sensors	Temperature sensor
	Pump feedback control	Circulation pump
	Inspection of PowerControl control and power supply cables	Controller
Every 6 months	Check	Pump rate control
Every 4,000 hours or 6 months	Servicing	Full-service inspection - carried out by an authorised service technician
	Cleaning	Cleaning the exchanger on the water and oil side

9. Controller

PowerControl is responsible for controlling the heat recovery system. Its task is to control the water circulation pump P1 (supply to the recovery system), to measure the temperature on the oil and water side and to control and protect the heat recovery system. The HMI panel next to the installed PowerControl pump group is responsible for the ongoing presentation of the operation of the recovery system. The presentation of the operating status and other functions is available via the six screens shown and described below.

9.1. Home screen

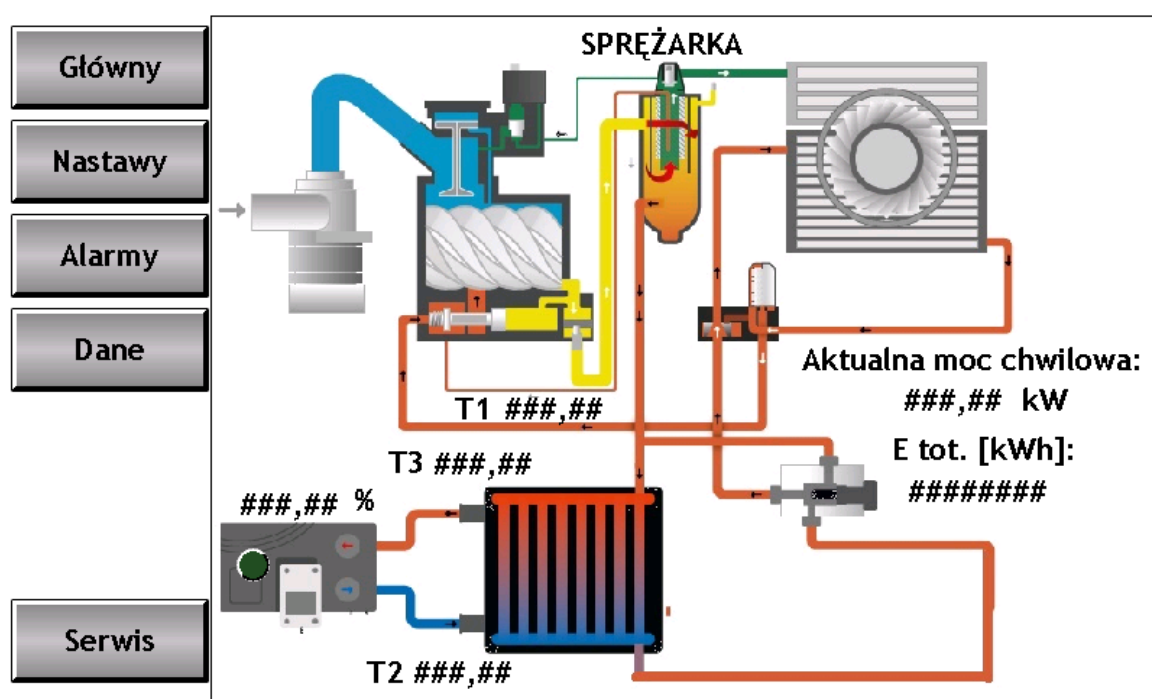


Figure 6. HMI home screen.

The home screen serves as a real-time view of the operation of the PowerControl heat recovery system's actuators.

T1 – temperature of the oil return in the compressor (downstream of the heat exchanger),

T2 – temperature of water entering the heat exchanger,

T3 – temperature of water leaving the heat exchanger,

Pump Start / Stop - the operating status of the pump is indicated by a circular light (green - running, red - stop). The percentage next to it represents the current setpoint (control),

Aktualna moc chwilowa – moc chwilowa odzyskana przez PowerControl w danym momencie swojej pracy,

E tot. [kWh] - the total amount of energy recovered from the system, expressed in kWh.
The percentage next to the visualised unit represents the current setpoint (control).

9.2. Settings

Główny

Nastawy

Alarmy

Dane

Serwis

Nastawy

NAJNIŻSZA TEMP OLEJU: ###.#

NAJWYŻSZA TEMP WODY: ###.#

ZAPROGRAMOWANY SETPOINT ###.#

TRYB STEROWANIA

Temp. Setpoint
Pwr. Maximizer 1
Pwr. Maximizer 2

Figure 7. HMI setting window.

In the settings window, we make changes to the settings of the temperature parameters involved in the logical structure of the control algorithm.

Lowest oil temperature - the lowest temperature to which the compressor oil in the recovery exchanger can be cooled.

Highest water temperature - the maximum value of the heated water temperature at which recovery will be disconnected. In practice, this means no heat extraction by the circuits.

SETPOINT preset - the value that overrides when one of the three PowerControl control modes is selected.

Control mode - three possible control modes to select the operation of the PowerControl:

- 1) 1) Temp. Setpoint – a mode in which pump operation depends on the flow temperature of the hydraulic coupling / buffer. Example: The setpoint water temperature is 60°C. The pump will adjust its speed to maintain a constant temperature of 60°C at the water outlet of the exchanger.

- 2) Pwr. Maximizer 1 and 2 – a mode designed to achieve maximum energy recovery. It adjusts the recovery operation independently of the temperature values on the return and feed water pipes.

NOTE!

Unauthorised changes to the default values may damage the installation and compressors.

9.3. Alerts

The screenshot shows the HMI alert window interface. On the left is a vertical sidebar with five buttons: **Główny**, **Nastawy**, **Alarmy**, **Dane**, and **Serwis**. The main area contains two alert tables. The top table has three columns: **Numer**, **Czas**, and **Treść**. The bottom table has four columns: **Numer**, **Czas**, **Czas odzysku**, and **Treść**. Both tables have empty rows below the headers and vertical scrollbars on the right side.

Figure 8. HMI alert window.

The alert window displays any communication errors that occur, pump overheating messages, compressor and receiver-side over-temperature alerts.

Pump alerts are permanently triggered - they require a reset. Other alerts appear and disappear automatically when they cease (e.g. overtemperature).

9.4. Data

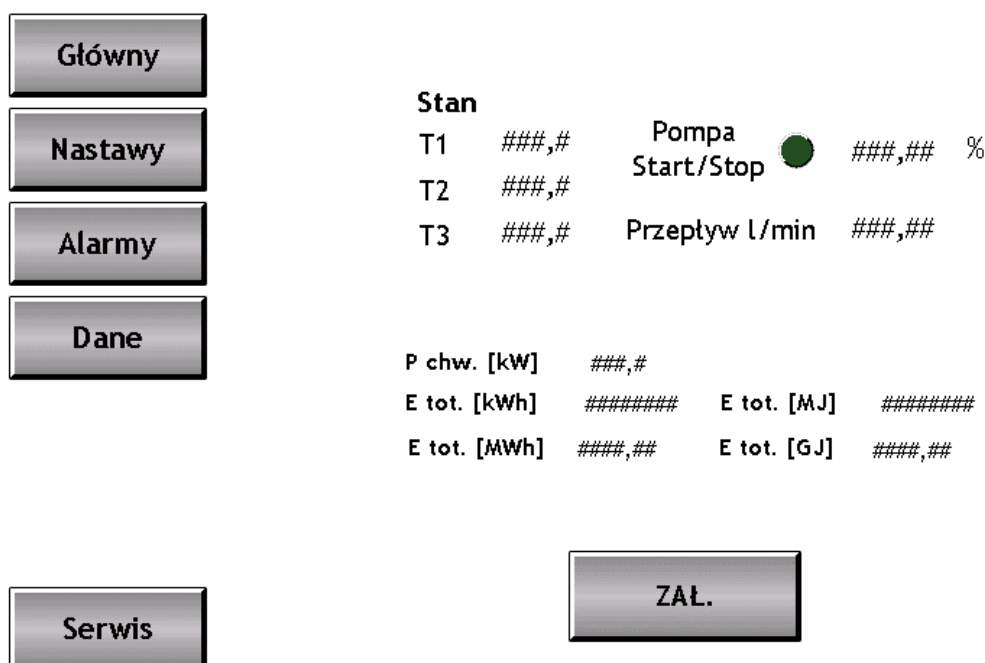


Figure 9. HMI data window.

The status window provides a quick and clear overview of all plant operating parameters in real time. It is also possible to switch heat recovery on or off by pressing the ON/OFF button in the centre of the window below the heat recovery data.

T1 – temperature of compressor oil return (downstream of the heat exchanger),

T2 – temperature of water entering the heat exchanger,

T3 – temperature of water leaving the heat exchanger,

Pump Start / Stop - the operating status of the pump is indicated by a circular light (green - running, red - stop). The percentage next to it represents the current setpoint (control),

Flow l/min - the rate at which the pump pumps water in litres per minute,

P chw. [kW] - the instantaneous power recovered by the PowerControl at a given point in its operation,

E tot. [kWh] – total amount of energy recovered from the system, expressed in kWh,

E tot. [MWh] – total amount of energy recovered from the system, expressed in MWh,

E tot. [MJ] – total amount of energy recovered from the system, expressed in MJ,

E tot. [GJ] – total amount of energy recovered from the system, expressed in GJ.

9.5. Service



Figure 10. HMI service window.

The service window allows the controller's language to be changed and Modbus communication to be previewed. The available languages include Polish, English and French.

9.5.1. Modbus communication

<div>Główny</div> <div>Nastawy</div> <div>Alarmy</div> <div>Dane</div> <div>Serwis</div>	Modbus RTU		Modbus TCP			
	Adres <input type="text" value="###"/>		IP stacji <input type="text" value="###"/> <input type="text" value="###"/> <input type="text" value="###"/> <input type="text" value="###"/>			
	Format ramki		Maska sieci <input type="text" value="###"/> <input type="text" value="###"/> <input type="text" value="###"/> <input type="text" value="###"/>			
	600	7 bit	IP routera <input type="text" value="###"/> <input type="text" value="###"/> <input type="text" value="###"/> <input type="text" value="###"/>			
	1200	8 bit	Tryb połączenia			
2400	1 Bit	Modbus UDP (slave)				
4800	2 bit	Modbus TCP (slave)				
9600	None					
19200	Odd					
38400	Even					
57600						
115200						

Figure 11. HMI communication - Modbus window.

Modbus RTU is based on the RS232 or RS485 asynchronous serial transmission standard. Data is transmitted in binary form and a 2-byte CRC code is used to check the correctness of the frames. This guarantees the correctness of the transmitted data. One Modbus RTU request consists of the slave address (1 byte), function code (1 byte), up to 256 bytes of data and CRC (2 bytes), the maximum request length is 255 bytes. There is a pause (no transmission) between Modbus RTU messages, which lasts at least 3.5 x the time required to transmit one byte.

Modbus TCP/IP is based on the ETHERNET TCP/IP communication standard. It is equivalent to Modbus RTU, but uses the TCP protocol on port 502 for communication. There is no checksum calculation as the higher TCP layer already does this. The ID field is not always used because the IP address used in the TCP/IP protocol is the device identifier.

str. 30

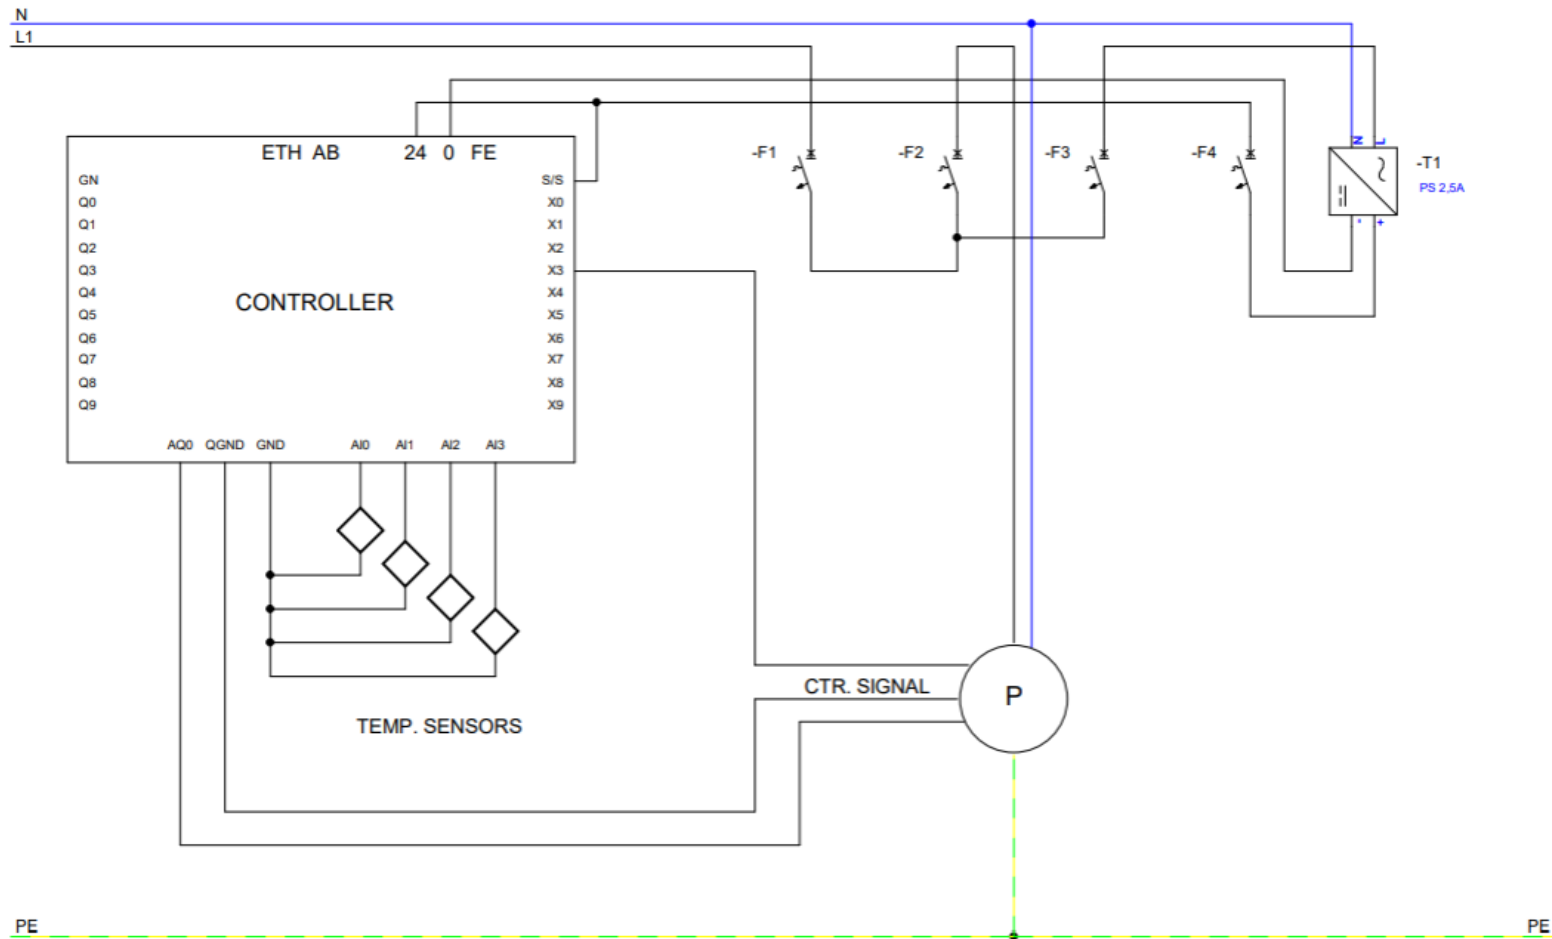


Figure 12. Electrical diagram – 230V/24V power supply.

11. Final remarks

The heat recovery system models described in this manual can be used in many countries. Heat recovery units purchased and shipped to European Union member states must be CE marked and comply with all relevant directives. In such cases, an EC certificate of conformity is included in the unit's design documentation. Any modification of the PowerControl heat recovery system is strictly prohibited, as it may render the EC certificates and markings useless.

The information contained in this manual is the proprietary and confidential property of ASFI and may not be copied without the prior written consent of ASFI management.

Nothing herein is intended to convey any express or implied promises, warranties or representations regarding the ASFI goods described. All such warranties and other terms and conditions of sale of the products are subject to the standard terms and conditions of sale of such goods, which are available upon written request.

ASFI reserves the right to make changes and improvements to its products without authorisation and without imposing any other restrictions that may be necessary to ensure compliance with such changes and improvements to recently sold products.

ASFI is not liable for errors in the original translation of the manual into languages other than Polish.

The design of the PowerControl heat recovery system and its solutions are exclusively patented by ASFI.

12. Warranty

ASFI contractually warrants that the equipment it manufactures and supplies will be free from defects in material and workmanship for a period of 18 months from the date of delivery or 12 months from the start-up of the PowerControl heat recovery system, whichever comes first. All cases of non-compliance with this warranty must be notified to the company in writing by the purchaser within the aforementioned period. ASFI will, at its discretion, rectify the problem by repairing the faulty equipment or supplying replacement parts, provided that the purchaser has stored, maintained and used the equipment in accordance with the guidelines specified in this manual. Any manufacturer's warranties on internal and external fittings supplied by ASFI but made by others will be transferred to ASFI to the extent that they can be transferred to the vendor of the heat recovery system. The vendor will not be obliged to make any alterations, replacements or repairs to the equipment, nor will the vendor be obliged to pay for any work carried out by the purchaser or others without the prior written consent of ASFI.

The warranty conditions do not cover cases of corrosion, erosion or normal material wear. Workmanship warranties are limited exclusively to the items specified in ASFI's offer. ASFI is obliged to perform its obligations in the manner and within the timeframe specified above.

ASFI is not obliged to make any other warranties or representations, express or implied, except for warranties of title. It also declines to make any implied warranties of merchantability or fitness for a particular purpose.

In dealing with any overt or covert nonconformities in the manner and during the warranty period, ASFI will fulfil all its obligations in respect of such nonconformities, whether caused by negligence during the warranty period, breach of the letter of warranty, strict liability or as a result of other arrangements relating to or arising from such equipment.

Without prior written notice to ASFI, the purchaser may not use any equipment that is found to be defective. The purchaser shall bear the sole risk and responsibility for such equipment.

13. List of figures and tables

FIGURE 1. HYDRAULIC FITTINGS FOR POWERCONTROL 55 AND 110.....	12
FIGURE 2. HYDRAULIC FITTINGS FOR POWERCONTROL 160, 250, 350 AND 500.....	14
FIGURE 3. COMPRESSOR PROCESS DIAGRAM.	16
FIGURE 4. PROCESS DIAGRAM OF A COMPRESSOR EQUIPPED WITH A HEAT EXCHANGER.....	17
FIGURE 5. PROCESS DIAGRAM OF A COMPRESSOR EQUIPPED WITH A HEAT EXCHANGER AND CONNECTED POWERCONTROL.	18
FIGURE 6. HMI HOME SCREEN.	24
FIGURE 7. HMI SETTING WINDOW.....	25
FIGURE 8. HMI ALERT WINDOW.....	26
FIGURE 9. HMI DATA WINDOW.....	27
FIGURE 10. HMI SERVICE WINDOW.....	28
FIGURE 11. HMI COMMUNICATION - MODBUS WINDOW.	29
FIGURE 12. ELECTRICAL DIAGRAM – 230V/24V POWER SUPPLY.....	30
TABLE 1. MAXIMUM VALUE FOR WATER IN THE HEAT RECOVERY SYSTEM. .	9
TABLE 2. SERIES WITH OPERATING POINT SPECIFICATIONS.	11
TABLE 3. PUMP GROUPS DN32-DN65.....	11
TABLE 4. TECHNICAL DATA FOR POWERCONTROL 55 AND 110.....	13
TABLE 5. TECHNICAL DATA FOR POWERCONTROL MODELS 160, 250, 350 AND 500.....	15
TABLE 6. GENERAL FAILURES.....	21
TABLE 7. MAINTENANCE CHART.....	23