

User Manual

Dew Point Sensor - W Series

Model: DEW



Table of Contents

Notices and Warnings.....3

About Dew Point Sensors.....5

Specifications – W Series6

Dew Point Sensor Pack.....9

Installation Overview 11

Installation 12

Using the Display.....21

Trouble Shooting.....25

Warranty.....27

Calibration.....27

Notices and Warnings

Notices

Please **read all of this manual** before you install, operate or maintain this product. Pay attention to notes, warnings and instructions. The manufacturer cannot be held liable for any damage which occurs as a result of noncompliance with this manual.

Do not tamper with device. Should the device be tampered with in any manner other than a procedure which is described and specified in this manual, the warranty is cancelled and the manufacturer is exempt from liability.

The product is designed exclusively for the described application. Use of this product in conditions not specified in this manual or, contrary to the instructions provided by the manufacturer, is considered improper handling / use of the product and will void your warranty. The manufacturer will not be held liable for any damages resulting from improper use of the product.

This manual should be read carefully by relevant personnel and the end user. This manual should be kept with the product and be made available as needed. **Once you install or use the product, you accept that you have read, understood and complied with this manual.**

CAA Sensors endeavours to make the content of this manual correct, but is not responsible for omissions or errors and the consequences caused. In case of any doubts or questions regarding this manual or the product, please contact CAA Sensors.



Warnings

Ignoring the warnings can lead to serious injury and/or cause damage!

When handling, operating or carrying out maintenance on this product, personnel must employ safe working practices and observe all local health & safety requirements and regulations.

Improper operation or maintenance of this product could be dangerous and result in an accident causing damage to machinery or injury or death.

The manufacturer cannot anticipate every possible circumstance which may represent a potential hazard. The warnings in this manual cover the most common potential hazards and are therefore not all-inclusive. If the user employs an operating procedure, an item of equipment or a method of working which is not specifically recommended by the manufacturer they must ensure that the product will not be damaged or made unsafe and that there is no risk to persons or property.

NEVER CHANGE ORIGINAL COMPONENTS WITH ALTERNATIVES.



Compressed Air Safety

Any contact with quickly escaping air or bursting parts of the compressed air system can lead to serious injuries or even death.

- Do not exceed the maximum permitted pressure.
- Only use pressure rated installation materials and parts.
- Avoid getting hit by escaping air or bursting parts.
- The system must be pressure-less during maintenance work.



Electrical Safety

Any contact with energised parts of the product, may lead to an electrical shock which can lead to serious injuries or even death. The user shall take all measures necessary to protect against electrical shock.

Consider all regulations for electrical installations.

The system must be disconnected from any power supply during maintenance work.

Any electrical work on the system is only allowed by authorised qualified personal.

Storage and transportation

- Make sure that the transportation temperature of the sensor is between -10°C to 60°C (14°F to 140°F).
- Please make sure that the storage temperature of the sensor is between -10°C to 50°C (14°F to 122°F) and the humidity is <90%, no condensation. Avoid direct UV and solar radiation during storage.

Cleaning

If you need to clean the sensor it is recommended to use a clean, dry cloth. For stubborn marks, use distilled water or isopropyl alcohol only.

Please note: contamination on the sensor tip will affect calibration and accuracy of the sensor. Removal of the contamination may not fix the issue.

Disposal

Electronic devices are recyclable material and do not belong in the household waste. The product, accessories and its packing material must be disposed according to local statutory requirements.

About Dew Point Sensors

Intended use

CAA Sensors dew point sensors are suitable for use in manufacturing, industrial and base building environments providing the sensor's specifications are met. This includes:

- Sensor is used in inert gases, eg air, oxygen, nitrogen, carbon dioxide
- Depending on which model you purchased, the pressure dew point is between:
 - -60°C to +60°C (-76°F to 140°F)
 - -80°C to +20°C (-112°F to +68°F)
 - -110°C to +20°C (-166°F to +68°F)
- Gas pressure between 0 to 17 bar (247 psi)
- Gas temperature is between: -40°C to +100°C (-40°F to +212°F)
- Power supply is between: 110-240vAC
- The dew point is **not** used in explosive environments.

Refer to the *Specifications* section (next page) for full requirements.

Our dew point sensors measure pressure dew point, gas temperature, relative humidity and pressure (optional).

About dew point sensors

Dew Point Sensors are the simplest way to monitor dryer performance and detect moisture issues before they can cause a problem.

Moisture in gas systems can clog pipes, break machinery, cause contamination (eg rust, mildew, bacteria) or cause freezing.

Dew point sensors are cheap, easy to install and have low maintenance requirements.

Benefits of monitoring dew point


- Improve system reliability
- Reduce product contamination risks
- Reduce system maintenance
- Reduce operating and energy costs
- Reduce the risk of rust and corrosion build up
- Improve dryer reliability
- Improve filter life and performance
- Reduce the risk of bacteria, fungus and yeast build up
- Alerts you to changes in dryer performance before moisture appears in your plant
- Easy to install and low maintenance
- Suitable for temporary or permanent installations.

Specifications – W Series


	DEWx1xxxx	DEWx2xxxx	DEWx3xxxx
Technology	Polymer	Alumina-Oxide	Alumina-Oxide
System	Compressed air and gas systems up to 4 Mpa (600psi)		
Dryer Type	Refrigerant, Desiccant, Drum or Membrane dryers		
Gases	Air, Argon, Carbon Dioxide, Carbon Monoxide, Helium, Hydrogen, Nitrogen, Oxygen		
Accuracy	<div>Dew Point</div> <div>+60 to -80°C: ±2°C</div> <div>-80 to -110°C: ±3°C</div> <div>Temperature: ±0.5°C</div> <div>Pressure: ±0.3% FS (at 23°C)</div> <div>Pressure changes with temperature: ±0.01 bar / °C</div> <div><i>The accuracy of the sensor is affected by on-site conditions. Contaminants such as oil, high humidity or other impurities can affect the calibration and accuracy of the sensor.</i></div>		
Minimum gas flow	> 1 L/min		
	Measurement Ranges		
Dew Point Measurement	-60°C to +60°C -76°F to 140°F	-80°C to +20°C -112°F to +68°F	-110°C to +20°C -166°F to +68°F
Pressure Measurement	0 to 17 bar (247 psi)		
Gas Temperature	-40°C to +100°C -40°F to +212°F		
	Outputs		
Output	4-20mA output Alarm Relay		
	Power		
Power Supply	Standard wall socket, 110-240vAC, 10W		
Electrical Connection	M12 PG Plug		
EMC	Meets IEC 61326-1		

	DEWx1xxxx	DEWx2xxxx	DEWx3xxxx
	Other Information		
Process Connection	6 mm stainless steel quick connector and 6 mm PTFE tube with nitto fitting. Tube length: 1.5 meters (5 foot) long		
Display	11cm (4.3") LCD colour touch screen		
Alarm	Red/green light, buzzer		
Operating Temperature	-30°C to +70°C -22°F to +158°F		
Gas Relative Humidity	0 to 95% RH		
Dimensions	350 mm L x 160 mm W X 98 mm D 13.8" L x 6.3" W x 3.9" D		
Casing	Plastic		
Installation Type	Permanent or temporary installation		
Calibration Frequency	Every 2 years <i>provided the sensor is not exposed to relative humidity above 85%</i>		

Dew Point Sensor Dimensions (mm)

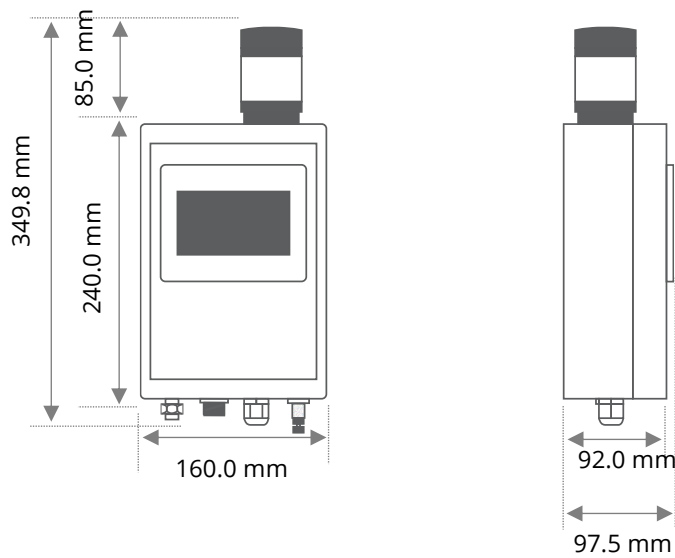

Dew Point Sensor Connections

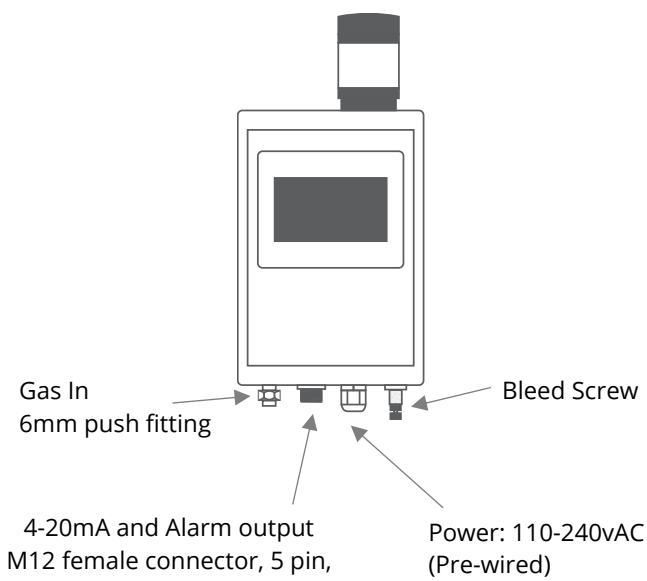

Dew Point Sensor Pack

Each dew point sensor comes with:

- ✓ Wall mount dew point sensor
- ✓ 6 mm PTFE tube with nitto fitting. Tube length: 1.5 meters (5 foot) long
 - A longer tube can be provided upon request, but it will slow the sensor's response time.



Installation



Installation Overview

Step 1 – Attach dew point monitor to a suitable location.

- The dew point monitor must be installed on a solid, vertical surface (eg a wall or post), near a power supply.

Step 2 – Create a connection point on the pipe, eg a ball valve, nozzle or nipple.

- The dew point monitor must be connected to the dry side of the system (ie after a dryer or in gases with relative humidity below 80%).
- Do **NOT** create a connection point on the bottom of a pipe or in a location that allows moisture to gather in the dew point monitor.

Step 3 – Connect dew point monitor to the pipe.

Step 4 – Connect power to the dew point monitor and turn on power.

Step 5 – Check Bleed screw

Step 6 – (Optional) Connect data out cable.

Tools and Equipment needed for installation

(not included with Dew Point Monitor Pack)



Drill



Screws



Screw Driver



Thread Tape /
Sealant



Ball Valve
(optional)



Nitto coupling
(optional)



Hot Tap Kit
(optional)

Installation



WARNING! Incorrect installation can damage the dew point monitor or cause it to work incorrectly.



Notes

- **Before installing the product, make sure it is rated for your system** (refer to the “Specifications” section).
 - Use of the product outside specified ranges or operating parameters can lead to malfunctions and may damage the product or system.
- **The dew point monitor must be disconnected from any power supply during installation and maintenance work.**
- The dew point monitor must be installed on a solid, vertical surface (eg a wall or post).
- Do not use this product in explosive areas.
- Do not use this product outdoors. The dew point monitor is only suitable for indoor applications.
- Always use the correct tools (eg screw driver, spanner / wrench) to install the product.
- Only use pressure rated materials and parts when installing and maintaining the product.
- Do not disassemble the product.
- Please follow local and national regulations before/during installation and operation.
- The product must be installed properly and calibrated regularly, otherwise it may lead to inaccurate measurement values.
- **Response times:** The dew point sensor may take up to 24 hours to stabilise. Once stabilised, response times will be a few seconds or less.


Step 1 – Attach dew point monitor to suitable location

The dew point monitor must be installed on a solid, vertical surface (eg a wall or post). Make sure the dew point monitor is installed near a power point.

The dew point monitor must be connected to dry gas (gas humidity should be less than 80% relative humidity (RH)).

There are 4 mounting holes on the back of the dew point monitor. You access these inside the cabinet.

- Drill 4 holes to match dimensions shown below.
 - Horizontal spacing: \varnothing 146 mm (5.7")
 - Vertical spacing: \varnothing 226 mm (8.9")
- Remove caps from each corner of the front panel.
- Unscrew front panel and open.
- Attach dew point monitor to a solid, vertical surface using screws (not supplied).
 - Fix firmly to prevent loosening or shaking
- Close and secure / screw front panel. Insert caps in each corner.

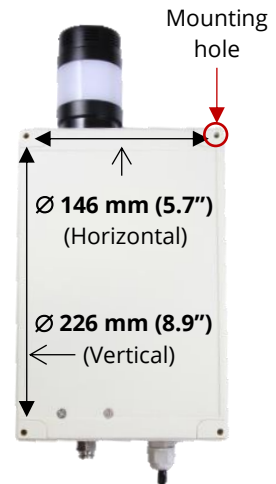

Back of Dew Point Monitor




Remove caps and unscrew front panel



Mounting holes



Correct Installation

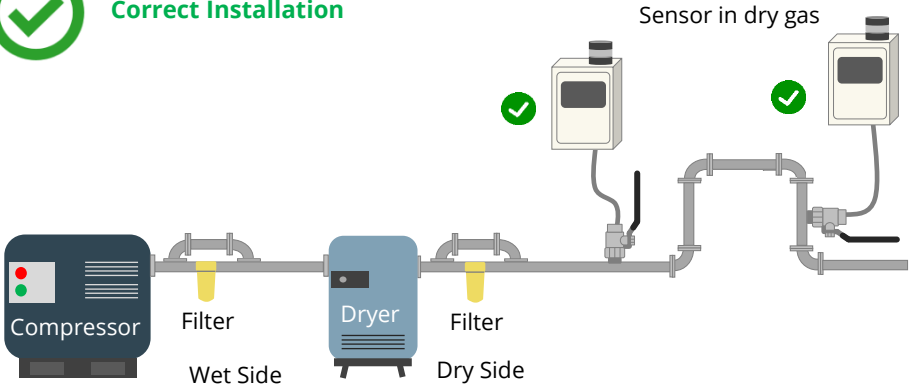


Incorrect Installation

Do **NOT** install the dew point monitor before a dryer or in gases with a relative humidity above 80%.

Do **NOT** install the dew point monitor below the connection point, as shown below.

Do **NOT** let condensate reach the tip of the sensor.

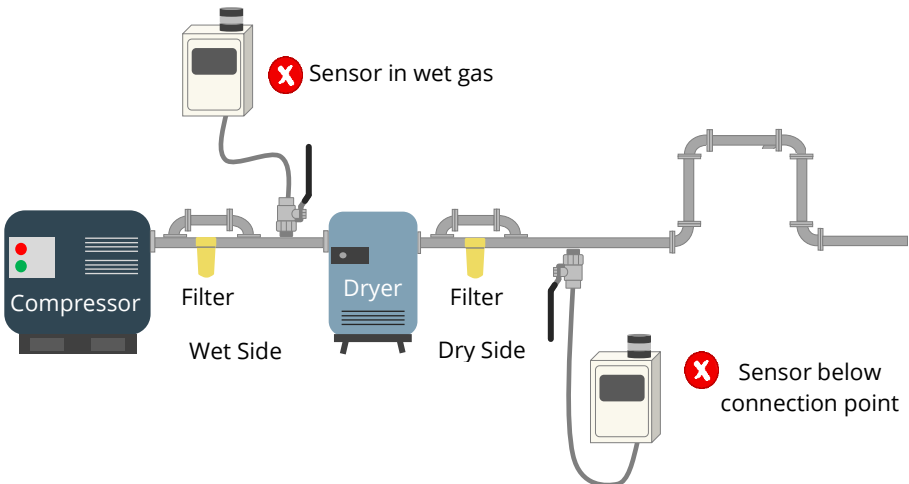


Step 2 – Create a connection point on the pipe

You need a connection point on the pipe, eg a ball valve or a nozzle or nipple.


The dew point monitor must be connected to dry side of system (after a dryer or in gases with relative humidity below 80%).

Do **NOT** create a connection point on the bottom of a pipe or in a location that allows moisture to gather in the dew point monitor.



Ball Valve

OR

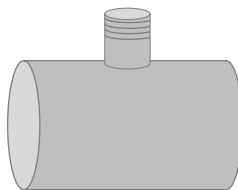


Welded nipple on pipe

Use of a ball valve is optional - You do not need to use a valve to install the sensor. However, using a valve will make removing the PTFE tube easier (eg when you need to remove the sensor for calibration).

If installing a ball valve, you can use a hot tap drill and clamp to create a connection point on pressurized or unpressurized pipes. See CAA Sensors website for information on hot tap drills and clamps.

Step 3 – Connect dew point monitor to pipe

- Inset the PTFE tube into the 6 mm push fitting on the dew point monitor.
- Insert the other end of the PTFE tube (with the nitto fitting) into the connection point (eg valve, nipple or nozzle).
 - The nitto fitting can be removed and the tube connected to a nipple using a push fitting or other connector, if required.
 - Use thread tap or sealant, where required.
- Open the valve.
- Check for leaks at the PTFE tube connection points.

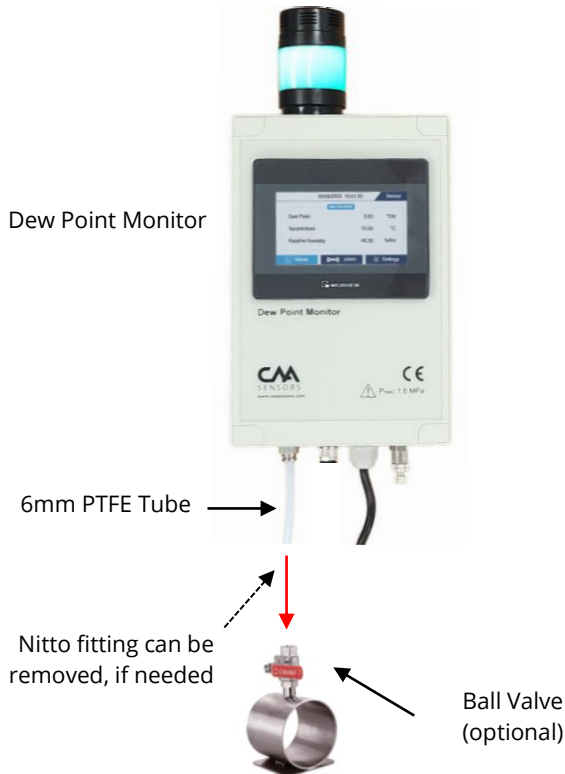

Step 4 – Connect dew point monitor to power and turn on




WARNING! Incorrect wiring can damage the sensor or cause it to work incorrectly.

Notes:

- Only connect the dew point monitor to a **standard wall socket, 110-240vAC**. High voltages will damage the product.
- Consider all local and national safety requirements and regulations for electrical installations.
- Any electrical work on the system is only allowed by authorised and qualified personal.
- Do not tamper with the wiring inside the dew point monitor. Modifying the wiring will void your warranty and could damage the sensor.

Plug in the Dew Point Monitor and turn the power point on.

- There is no on/off switch on the dew point monitor.

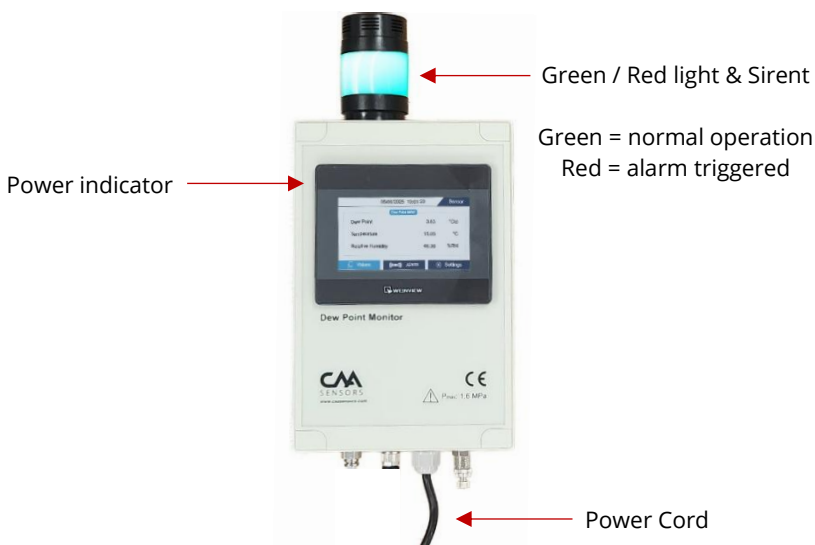

Step 5 – Check the Bleed Screw

The bleed screw helps to draw gas up into the dew point monitor.



- If its closed, gas might not reach the dew point sensor. This will affect measurements
- If its open, too much, too much gas will escape which will affect measurements.

Make sure the bleed screw is opened slightly so that a very small amount of gas is escaping. **You want to very faintly hear the gas escaping.**



Step 6 – (Optional) Connect Data Out Cable


The Dew Point Monitor comes with a 5 pin, M12 connection for 4-20mA output and an Alarm relay output.

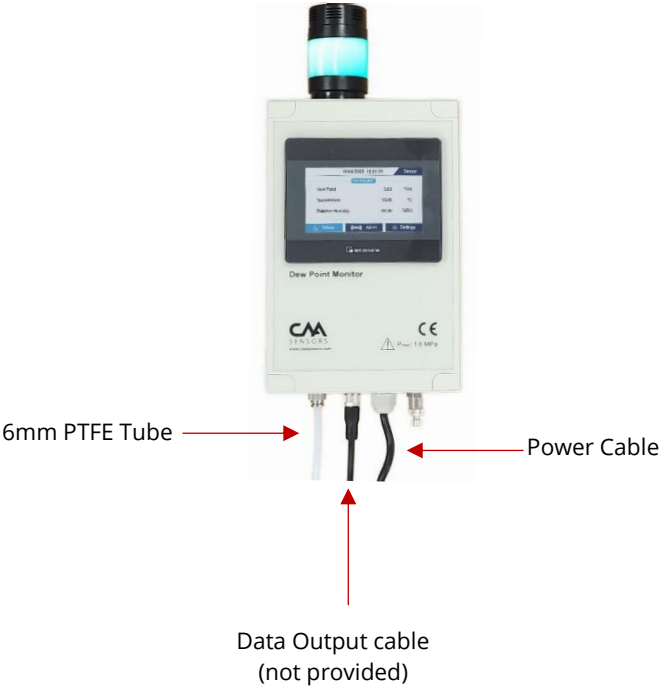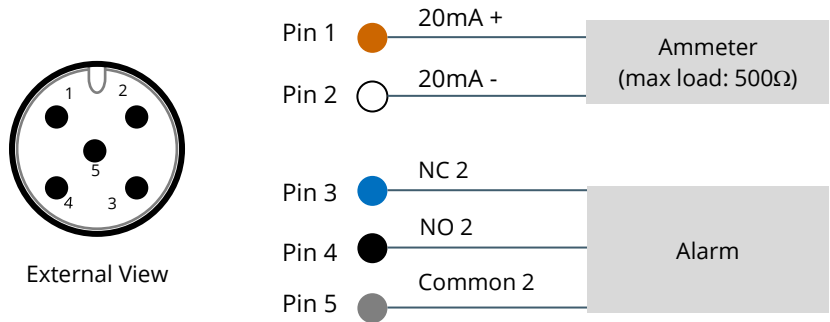

Using the Display



Using the Display

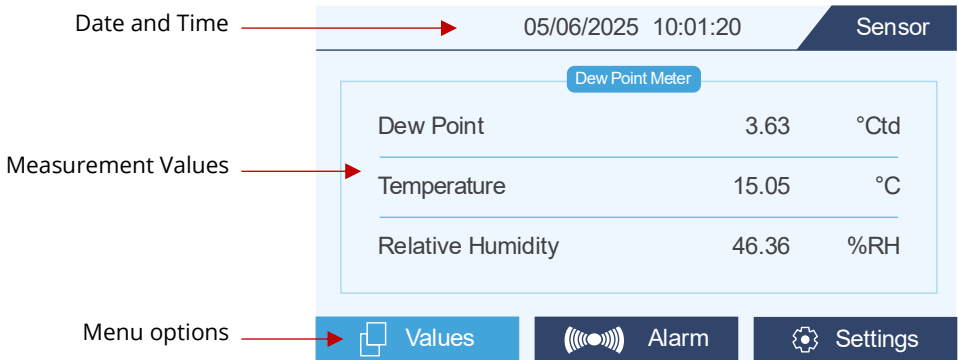

Menu Options

The touch screen display has three (3) main menus (along the bottom of the screen) – 'Values', 'Alarm' and 'Settings'.

- **Values** (or home screen) shows you the current dew point, temperature and relative humidity values.
- **Alarms** allows you to set the alarms.
- **Settings** allows you to:
 - change the brightness of the screen
 - set the date and time
 - change the units of measure and
 - view the device information (serial number, hardware version and software version).

Alarms

05/06/2025 10:01:20 Sensor

Alarm	Channel	Dew Point ▼
Alarm Ext	Type	Lower ▼
	Hysteresis	1.00
	Threshold	-20.00

Values
 Alarm
 Settings

The dew point monitor has two independent alarm relays:

- **Alarm** = internal alarm, i.e. the red/green alarm light on the dew point monitor
- **Alarm Ext** = external alarm relay. This alarm is independent to the internal alarm. You can connect an external alarm via the M12 connector. See “Step 5 – (Optional) Connect Data Out Cable” for wiring details.

Alarm Channels:

- Dew Point
- Temperature
- Relative Humidity
- Atmos. Dew Point
- Pressure (only available if you have the dew point monitor with pressure)

Alarm Types: You can only set 1 type of alarm - upper or lower.


- Lower – alarm will trigger when the value drops to this number
- Upper – alarm will trigger when the value increases to this number

Hysteresis

- For example, if you set the alarm to trigger when it reaches an upper value of 25 and the Hysteresis is 1, the alarm will automatically turn off when the reading drops to 24.

Threshold – the value at which you want the alarm to trigger.

Settings

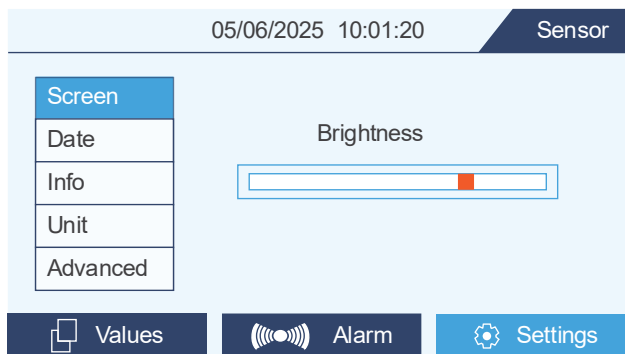

Screen – adjust the brightness of the screen

Date - set the date and time

Info - view the device information - serial number, hardware version and software version.

Units - change the units of measure

- Temperature = °C or °F
- Pressure (only available if you have the dew point monitor with pressure) = PSI, Bar, mBar, Mpa, kPa, hPa, Pa
- Press the '**Set**' button after you changes

Advanced – Password protected. You should not access the Advanced settings as changes to these settings can affect the accuracy of the dew point monitor. The advanced menu allows you to adjust pressure, dew point offset and modbus settings.

Trouble Shooting



Trouble Shooting

Problem	Possible Causes	Suggested Action
Readings are different than expected	Sensor installed incorrectly, eg upside down, in wet air	Check installation
	Gas is not reaching the sensor tip.	<ul style="list-style-type: none">• Check gas system is turned on• Open ball valve (if installed)• Check that the PTFE tube is inserted correctly• Check for leaks or kinks in the PTFE tube• Check that the measurement chamber (inside the dew point monitor) is open slightly.
	Measurement chamber is set incorrectly	<ul style="list-style-type: none">• The bleed screw valve on the measurement chamber should be opened slightly so that a very small amount of gas is escaping.• You want to just hear the gas escaping. This will draw the gas up past the sensor tip.• If the screw is closed or open too far the readings will be incorrect
	Dryers, filters, condensate drains are not working correctly	Service equipment



Problem	Possible Causes	Suggested Action
	Equipment failed (eg dryer failure) thus allowing too much water vapour, oil or particles to enter the system	Sensor may be damaged. Contact CAA Sensors
	Sensor due for calibration	Calibrate sensor. CAA Sensors can help with calibration
Readings don't change or readings stuck on a certain number	Sensor damaged	Contact CAA Sensors
	Incorrect sensor for your compressed air system	Check that the sensor's specifications are suitable for your system.
I can't output data to my SCADA or alarm	Incorrect wiring	Check wiring
The touch screen doesn't work	Dirty screen, using a hard object to touch the screen, pressing too hard, etc	<ul style="list-style-type: none"> • Clean the screen. • Use the fleshy part of your finger to touch the screen. <ul style="list-style-type: none"> ◦ The touch screen does not work if you use a pen or fingernails. • Try pressing harder, or softer.

Need help?

Contact your local distributor.

Alternatively, contact CAA Sensors via:

- Phone: +61 494095632
- WhatsApp: +61 494095632
- E-mail: sales@caasensors.com
- Website: www.caasensors.com

Warranty

CAA Sensors provides a 12-month warranty for all sensors. The warranty covers materials and workmanship under the stated operating conditions from the date of delivery. Please report any findings immediately and within the warranty time.

If faults occur during the warranty period CAA Sensors will repair or replace the defective unit, without charge for repair labour and material costs but there is a charge for other services such as labour to remove or reinstall the instrument, transport and packing. Warranty repairs do not extend the period of warranty.

The following damage is excluded from this warranty:

- Improper use and non-adherence to the user manual.
- Use of unsuitable accessories.
- External influences (e.g. damage caused by vibration, damage during transportation, excess heat or moisture).

The warranty is cancelled when one of the following situations occurs:

- The user opens the measurement instrument without a direct request written in this manual.

- Repairs or modifications are undertaken by third parties or unauthorised persons.
- The serial number has been changed, damaged or removed.

Other claims, especially damage occurring on the outside of the instrument (eg dents, marks), are not included unless responsibility is legally binding.


Calibration

The sensor is calibrated before delivery. The calibration date is printed on the certificate which is shipped with the sensor.

Dew Point Sensors require calibration to remain accurate. The frequency of calibration depends greatly on the level of contamination within your system.

We recommend you calibrate the sensor every 2 years (provided the sensor is not exposed to relative humidity above 85%). Calibration is excluded from the product warranty. For more information, contact CAA Sensors:

- Phone: +61 494095632
- WhatsApp: +61 494095632
- E-mail: sales@caasensors.com

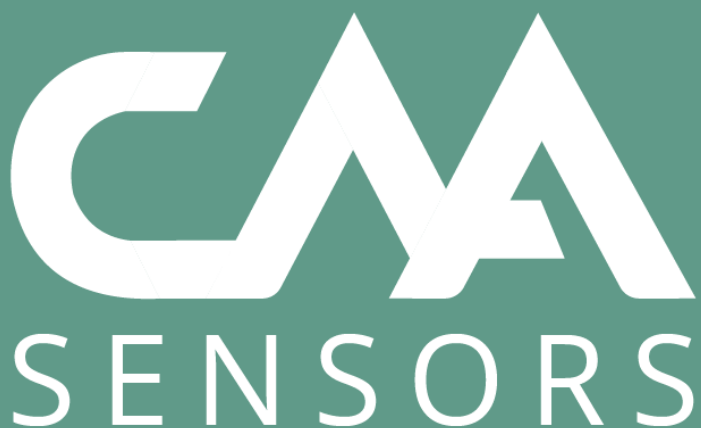

CAA Sensors Pty Ltd

Address: 2/7 Narabang Way, Belrose NSW 2085, Australia

Phone / WhatsApp: +61 494 095 632

E-mail: sales@caasensors.com

Website: www.caasensors.com